



HOW TO USE THE ASSET MANAGER PORTAL

Go to www.UseDryLINK.com and log in with your DryLINK credentials or create an account.

PHOENIX

SIGN IN

Please enter your email address and password below.

Email

Password

Keep me signed in [Forgot your password?](#)

SIGN IN


Need an account? [Sign Up](#)

@2022 Therma-Stor LLC, All Rights Reserved, App Version: 2.9.0.



HOW TO USE THE ASSET MANAGER PORTAL

Click on Asset Manager and Tagged Assets to view our main Asset Manager screen.

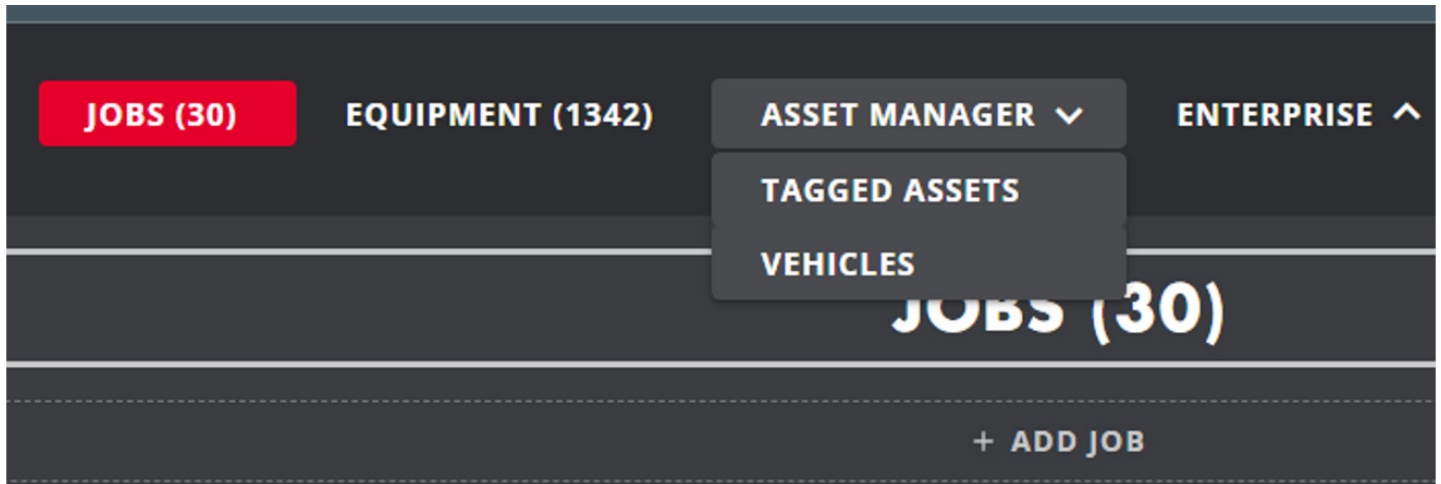

Our system has locations and statuses. Locations are the places where your assets are located now.


Warehouses – Places where you store equipment when not in use.

Vehicles – All vehicles that transport equipment and are equipped with a gateway.

Jobs – All jobs that have equipment currently located at them, including closed jobs.

Gateways – Stand alone gateways used for temporary warehouse situations.


Unnamed – Any location that does not meet one of the above location requirements.

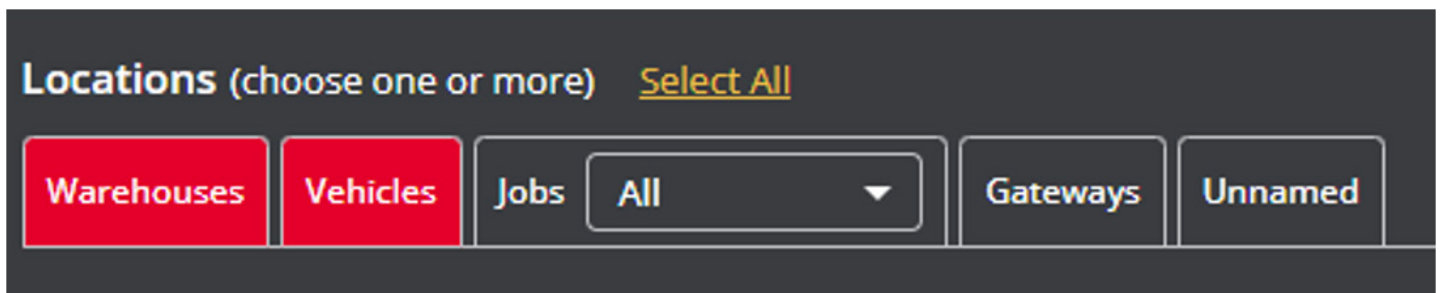



HOW TO USE THE ASSET MANAGER PORTAL

Statuses are the current status of each piece of equipment.

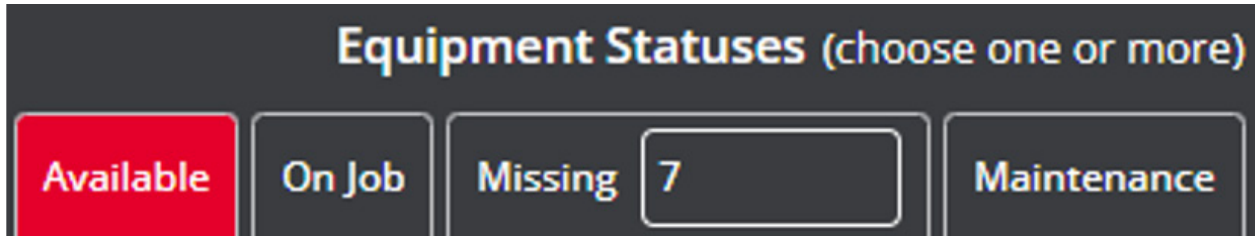

Available – Ready to be deployed.

On Job – Currently on an active job.

Missing – Equipment not scanned by a gateway or a phone in X days (the default is 7 days).


Maintenance – Equipment needs attention before being ready to deploy.

Lost – This status is set in the equipment list. Once set, you will not see it unless you specifically select lost equipment in the equipment list.

USING LOCATIONS AND STATUSES

If you select “Warehouses” and “Vehicles” for locations and Available for the status, you will see all the equipment that is at a warehouse or on a vehicle and is available to be deployed.

You can use our search tool to search for equipment at a location or you can search for the name of an individual piece of equipment. You can also use the “Label” drop down to search for all equipment with the same label applied to it.

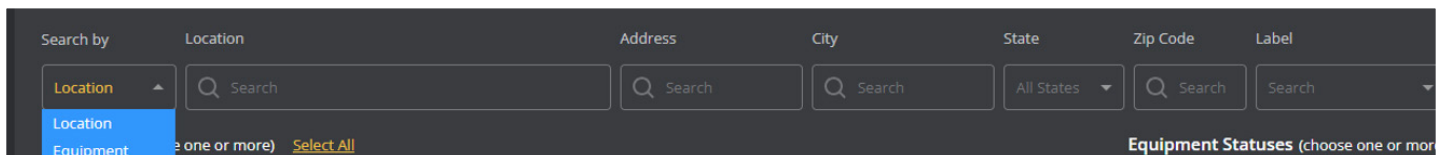





HOW TO USE THE ASSET MANAGER PORTAL

USING THE MAP VIEW

By default, all of the locations on the left are shown on the map.

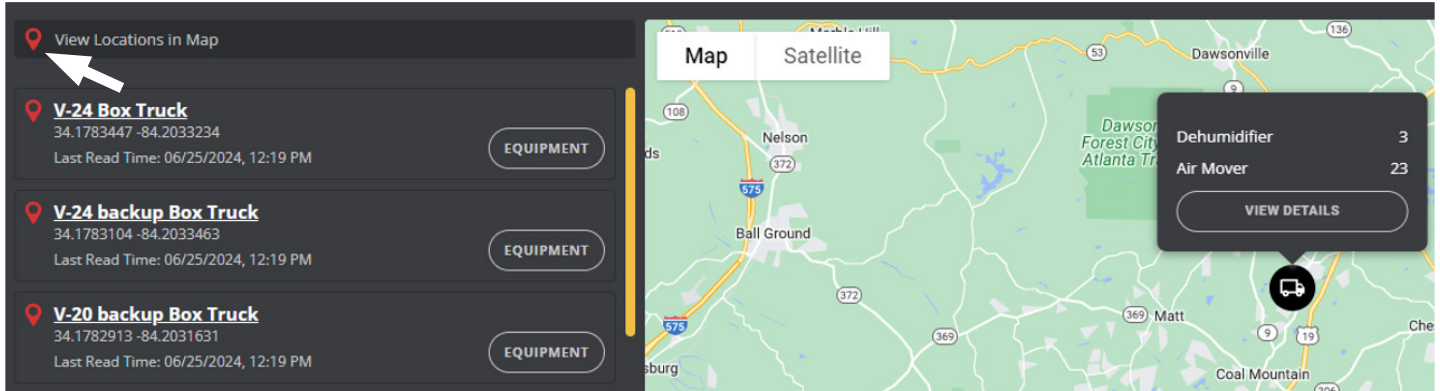

In order to automatically zoom in on a location, turn off all pins by clicking on the “View Locations in Map” button. All locations are now deselected. Click on one to zoom directly to that location. Clicking on an icon will display the equipment at that location.

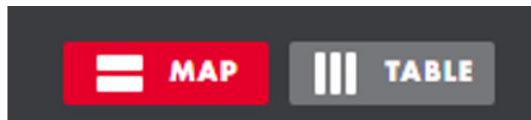

Clicking on the table view will give you a list of locations with equipment in rows and the amount of equipment by Xactimate categories in columns. You can add custom columns when adding new equipment into the system.

	All	Dehu LGR - L	Axial Air Mover 25.5 HP	Low Profile Air Mover 25.5...	HEPA 0.699 CFM
View Locations in Map	33	2	7	23	1
V-24 Box Truck 34.1783447 -84.2033234 Last Read Time: 06/25/2024, 12:19 PM	13		3	9	1
V-24 backup Box Truck 34.1783104 -84.2033463 Last Read Time: 06/25/2024, 12:19 PM	33	2	7	23	1
V-20 backup Box Truck 34.1782913 -84.2031631 Last Read Time: 06/25/2024, 12:19 PM	23			23	
5 Isuzu NPR 34.1821709 -84.2031937 Last Read Time: 06/25/2024, 12:19 PM	31			31	
V-20 Box Truck 34.1783752 -84.2032623 Last Read Time: 06/25/2024, 12:19 PM	20	5		14	1



HOW TO USE THE ASSET MANAGER PORTAL

LABELS

You can add labels to your system in the Settings section or on the fly in the equipment list. Select the equipment you want to label using the selection box on the left. Click “Manage Labels” at the bottom of the screen.

	Equipment Name ^	Serial #	General Type	DryTAG Battery	Dry
<input checked="" type="checkbox"/>	<u>02001-Axial Focus</u>	C1107486	Air Mover		152
<input type="checkbox"/>	<u>02003-Axial Focus</u>	H0954042	Air Mover		152
<input checked="" type="checkbox"/>	<u>02007-Axial Focus</u>	C1199605	Air Mover		152
<input type="checkbox"/>	<u>02008-Axial Focus</u>	C1199667	Air Mover		152
<input type="checkbox"/>	<u>02009-Axial Focus</u>		Air Mover		152
<input type="checkbox"/>	<u>02010-Axial Focus</u>	D1199064	Air Mover		152

ASSIGN (2) **MANAGE LABELS (2)**

Manage Labels (2)

You can manage Labels for the Selected Equipment:

- 02001-Axial Focus ×
- 02007-Axial Focus ×

Please choose your option:

- Add Labels
- Remove Labels

Labels

Click to choose labels

SAVE CANCEL



HOW TO USE THE ASSET MANAGER PORTAL

You can add or remove labels. You can also add an existing label or click “+ add label” to create the label on the fly.

Add Labels Remove Labels

Labels

Click to choose labels

<input type="checkbox"/> #5 Isuzu
<input type="checkbox"/> 08- INT
<input type="checkbox"/> 880 Butler Rd Murfreesboro
<input type="checkbox"/> Missing <2/1/24
<input type="checkbox"/> Missing <4/3/24
<input type="checkbox"/> Test
<input type="checkbox"/> Ver 2.1
<input type="checkbox"/> Warehouse Physical 022824
<input type="checkbox"/> XYZ Customer

+ [Add Label](#)

Close the labels drop down menu to get the save button

Add Labels Remove Labels

Labels

#5 Isuzu ×

<input checked="" type="checkbox"/> #5 Isuzu
<input type="checkbox"/> 08- INT
<input type="checkbox"/> 880 Butler Rd Murfreesboro

Click the save button to save the changes

Please choose your option:

Add Labels Remove Labels

Labels


#5 Isuzu ×



HOW TO USE THE ASSET MANAGER PORTAL

OTHER NAVIGATION

Click on the “Map” or “Satellite” view to change your map.

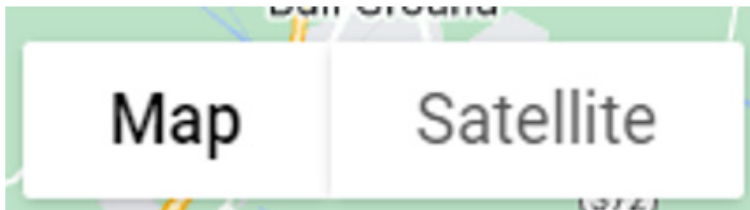

Click on this icon for a full-screen view



Click on the blank area of any card to select the corresponding icon on the map with an equipment summary. Click on the “Equipment” button to go to a list of each piece of equipment at that location. Click on the “View Details” button on the icon equipment summary to go to the “table” view with locations and Xactimate categories.

